


Installation Instructions

Laminate flooring

Megaloc aqua protect installation system in tile format with integrated impact sound insulation.



Rev. 2.2 / 11.23

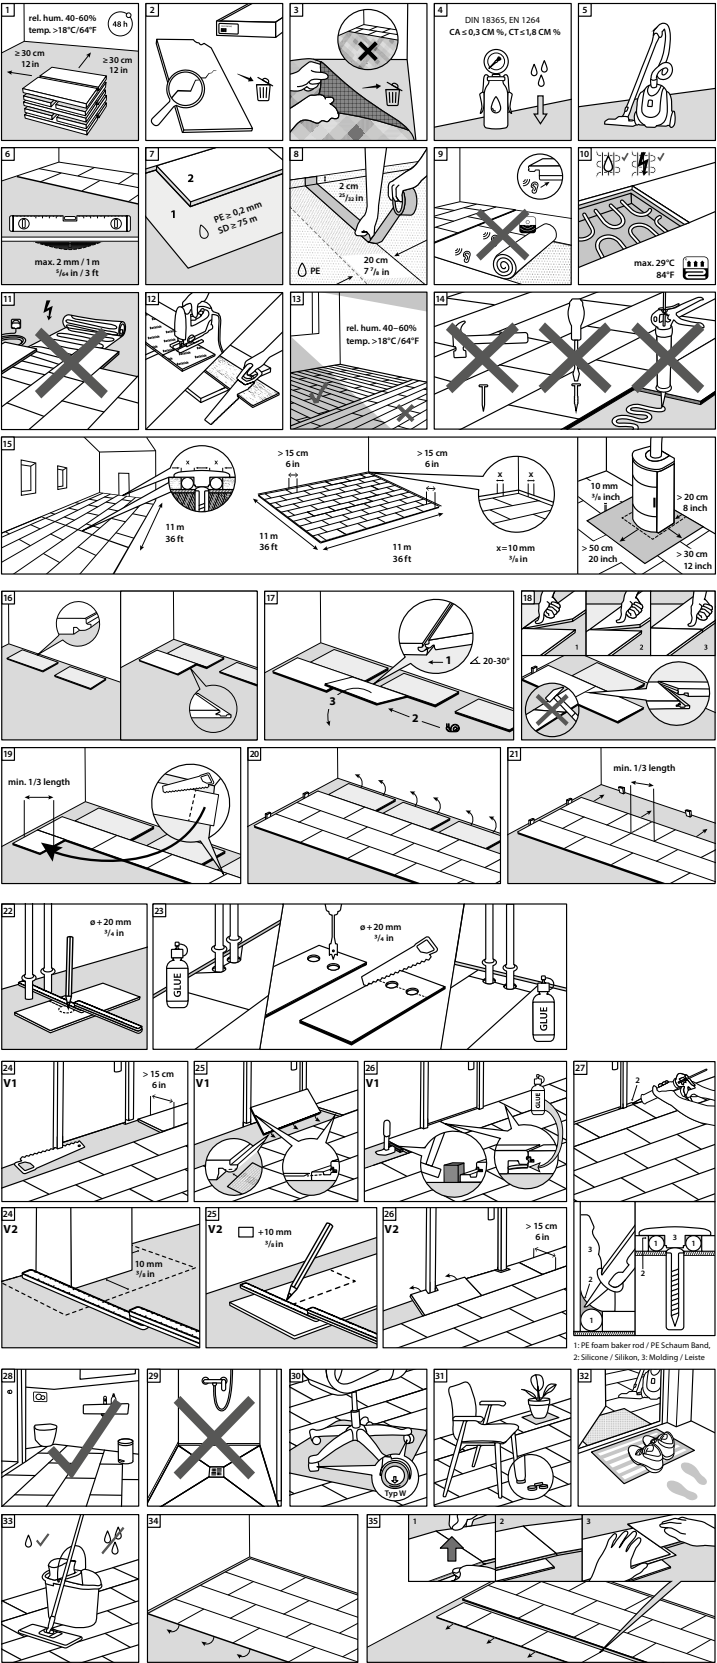

1: PE foam baker rod / PE Schaum Band,
2: Silicone / Silikon, 3: Molding / Letiste



- QR code to the
- Installation instructions in text form
 - Cleaning and maintenance instructions
 - Technical data sheets
 - Product certificates