


# Installation Instructions

## Laminate flooring

Megaloc aqua protect installation system in tile format without integrated impact sound insulation.

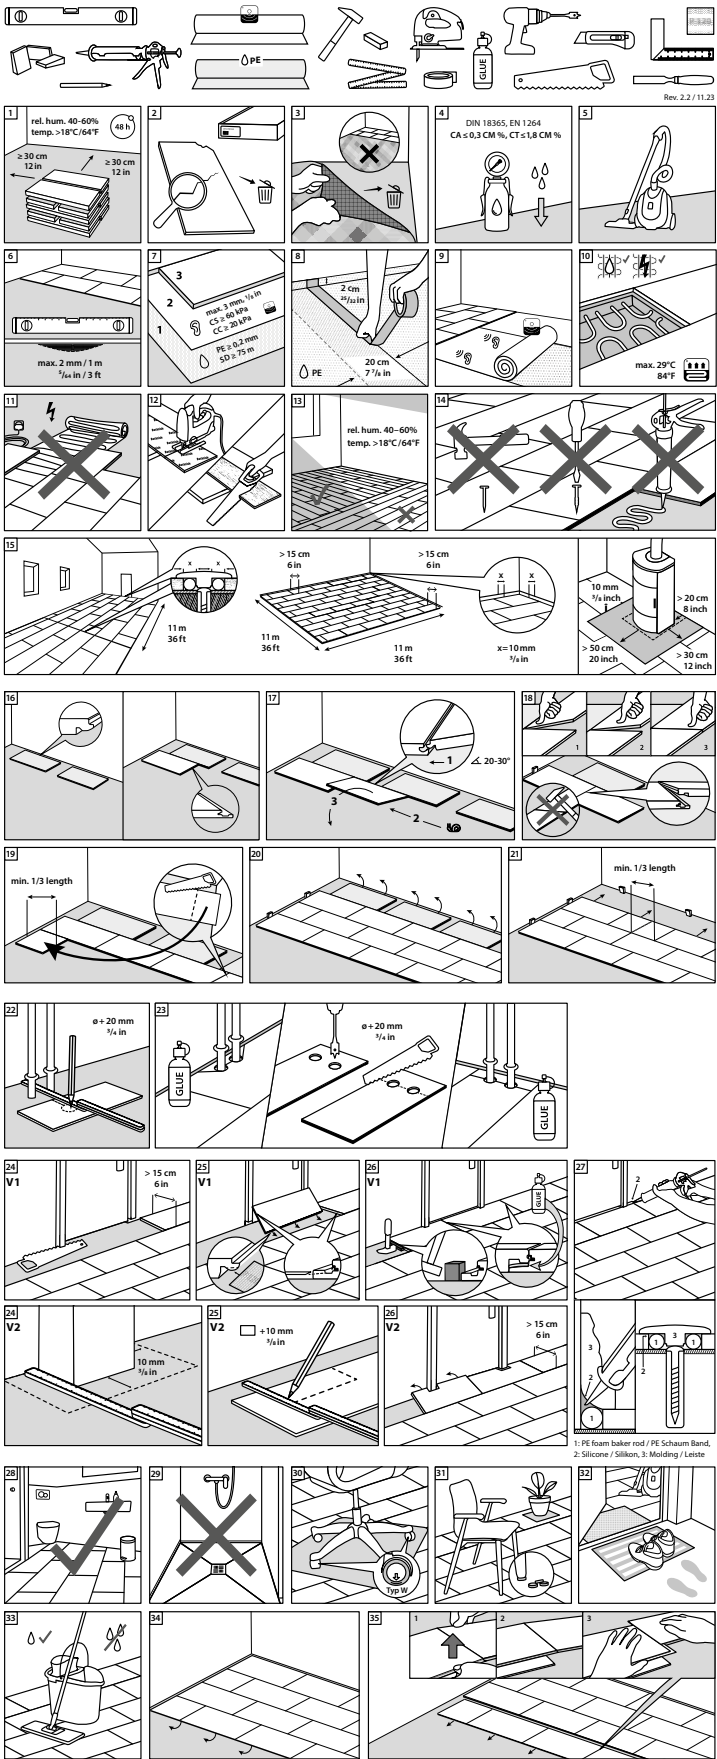

1: PE foam balker rod / PE Schaum Band, 2: Silicone / Silikon, 3: Molding / Leiste



QR code to the

- Installation instructions in text form
- Cleaning and maintenance instructions
- Technical data sheets
- Product certificates